


PUSH BUTTON MECHANICAL COMB LOCK FOR KEY CABINETS

How to Change your Code Number

- 1) Remove the lock from the door
- 2) Remove the 4 retaining screws from the back of the keypad. Take EXTRA care to keep the keypad on a flat surface, when you are removing the covering plate, because there are a lot of small components inside.
- 3) You will now see that here are 5 red coloured coded tumblers and 8 blue coloured uncoded tumblers plus 1 clear tumbler ('C' button).
- 4) To change your code push the 'C' button down and hold it. You can the easily remove 1 or more of your coded & uncoded tumblers, using the tweezers supplied.

Remember, the red tumblers represent coded digits and the blue represent non-coded digits

- 5) Please note you should NEVER remove the 'C' Tumbler
- 6) Please note the different shapes of tumblers, before reinserting them into the lock body. Firstly there is a difference in shape between the coded & uncoded tumblers, illustrated below. And secondly when refitting the tumblers into the lock body, they must be fitted facing the right way, again see the illustration below. (All square cut-outs must face outwards)
- 7) After you have refitted the tumblers and make a note of the new code, please replace the metal plate with the 4 screws
- 8) PLEASE NOTE – With the spare tumblers provided, you can either increase the number of digits in your code to 6 – 7 or reduce to 3 – 4.

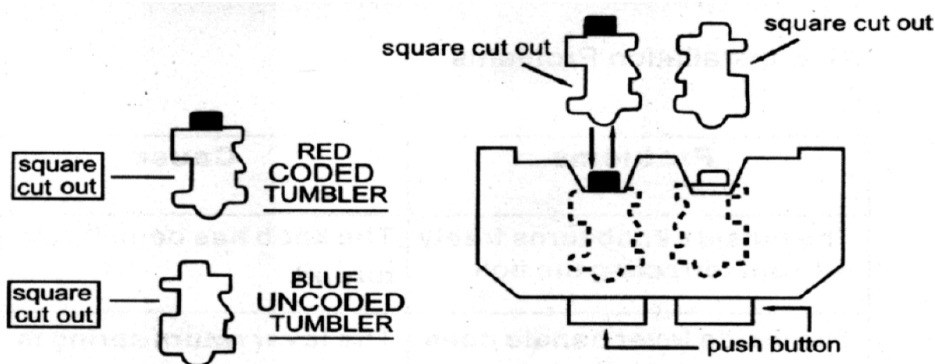

ACCESS CODE: